

# **GV-EV48 Elevator IP Control Panel**




### Introduction

GV-EV48 is an elevator controller designed to control access of 1 elevator with a maximum of 48 floors. Up to 2 GeoVision readers can be connected to the GV-EV48 through RS-485 and/or network connections. GV-EV48 can recognize identification cards and grant access to the authorized floors regulated by GV-ASManager access control management system.

## **Key Features**

- · Grant access to specific elevator floors using access cards, card's PIN code or fingerprints
- GV-EV48 24 Floors: Built-in 24 relay outputs to support up to 24 elevator floors
- GV-EV48 48 Floors: Built-in 48 relay outputs to support up to 48 elevator floors
- Support up to 2 GV-Readers / GV-GF Fingerprint Readers through RS-485 and network connections
- Support up to 48 I/O ports of GV-I/O Boxes

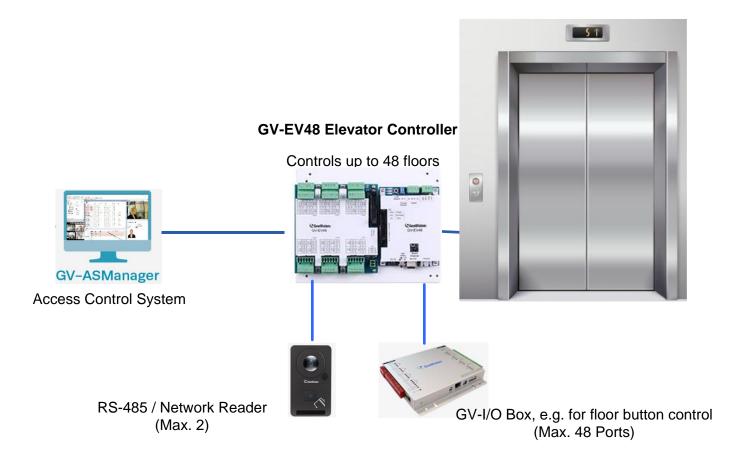

-1-



# **Specifications**

System Requir	ements	
GV-ASManager Version		GV-ASManager V4.1 or later
Hardware		
CPU		32-bit ARM7TDMI
Number of User Cards		40,000 cards
Event Buffer		1,000,000 events and log data
Power		AC 100~250 V, 50~60Hz
RS-485 Interface		1 RS-485 interface for GeoVision RS-485 readers (max. 2) and GV-IO Box 4/8/16 Ports
		(max. 48 I/O ports)
TCP/IP Interface		1 TCP/IP interface for GeoVision network readers
Communication		TCP/IP
Battery		Built-in battery
Output	GV-EV48-24 Floors	24 relay outputs (30VDC, 1A; 125V AC, 0.3A)
	GV-EV48-48 Floors	48 relay outputs (30VDC, 1A; 125V AC, 0.3A)
Operating Temperature		0~65°C / 32 ~ 149°F
Operating Humidity		10% ~ 90% RH (non-condensing)
Dimensions (W x H x D)		210 x 170 x 55 mm (8.27 x 6.69 x 2.17 in)
Weight		610 g (1.34 lb)
Certification		CE, FCC, RoHS

#### Note:

- 1. The RS-485 interface supports 3<sup>rd</sup>-party Weigand readers via GV-WTR Wiegand converters.
- 2. Specifications are subject to change without notice.

## **Options**

Optional devices can expand the capabilities and versatilities of your GV-EV Controllers. Consult your sales representative for more information.

GV-AS ID Card & GV-AS ID Key Fob	125 KHz and 13.56 MHz cards / key fobs, 900 MHz UHF Tag are available.		
GV-CR420	GV-CR420 is a card reader with a built-in 4MP wide angle IP camera. The card reader recognizes identification cards and transmits live view through network connection.		
GV-DFR1352	GV-DFR1352 is a card reader that uses a 13.56 MHz frequency. The reader has both Wiegand and RS-485 outputs that can be connected to any standard access control panel.		
GV-FWC	GV-FWC integrates GeoVision face-recognition-based cameras, software and readers into access control systems by sending access card data, paired to Face IDs, to controllers either through TCP/IP or Wiegand connection.		
GV-I/O Box	GV-IO Box provides 4, 8 or 16 inputs and relay outputs. It supports both DC and AC output voltages. Depending on models, it provides PoE, TCP/IP and RS-485 port for PC connection.		
GV-Reader 1251	GV-Reader 1251 is a card reader that uses a 125 kHz frequency. It has both Wiegand and RS-485 outputs that can be connected to any standard access control panel.		
GV-R1352	GV-R1352 is a card reader that uses a 13.56 MHz frequency. The reader has both Wiegand and RS-485 outputs that can be connected to any standard access control panel.		
GV-RK1352	GV-RK1352 is a card reader with keypad that uses a 13.56 MHz frequency. The reader has both Wiegand and RS-485 outputs that can be connected to any standard access control panel.		
GV-GF Fingerprint Reader	GV-GF1921 / 1922 is a fingerprint reader, supporting three operation modes: Fingerprint Only, Fingerprint + Card and Card Only. Readers with optical and capacitance sensors are available.		
GV-WTR	GV-WTR is a converter designed to support Wiegand interface to RS-485 interface, thereby enabling 3rd par readers to be connected to RS-485 GV-Controllers. Through the GV-WTR, Wiegand-interface readers can be easily combined to access control systems for improved versatility.		
Cabinet (GV-AS Iron Box)	With the cabinet (Dimension: $383.5 \times 443.5 \times 112.2 \text{ mm} / 15.1 \times 17.5 \times 4.4 \text{ in}$ ), GV-AS Controllers can be mounted directly to a wall or recessed into the wall.		

-2-



## **Packing List**

- GV-EV48 24 Floors / 48 Floors
- Power Adaptor 12V DC / 3A
- Power Cord
- Battery Cable
- Screw x 8
- Hex Nut x 8
- Hex Pillar x 8
- Micro SD Card 2 GB
- Software CD
- Warranty Card