



GV-POS Text Sender

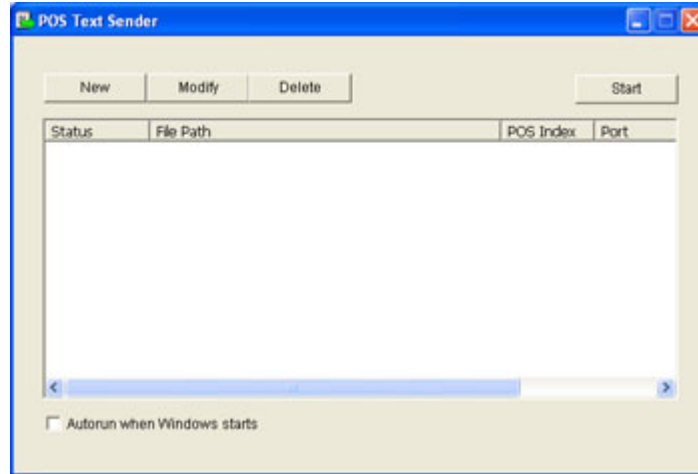

INTRODUCTION

With an optional dongle, GV-POS Text Sender allows you to directly connect the GV-DVR System to Windows-based POS devices that can generate TXT, INI or JNL files and POS devices compatible with Internet or OPOS protocols. The POS transaction data is transferred to the GV-DVR System via a RS-232 serial cable or TCP/IP connection. The transaction data will be overlaid on live images or recordings.

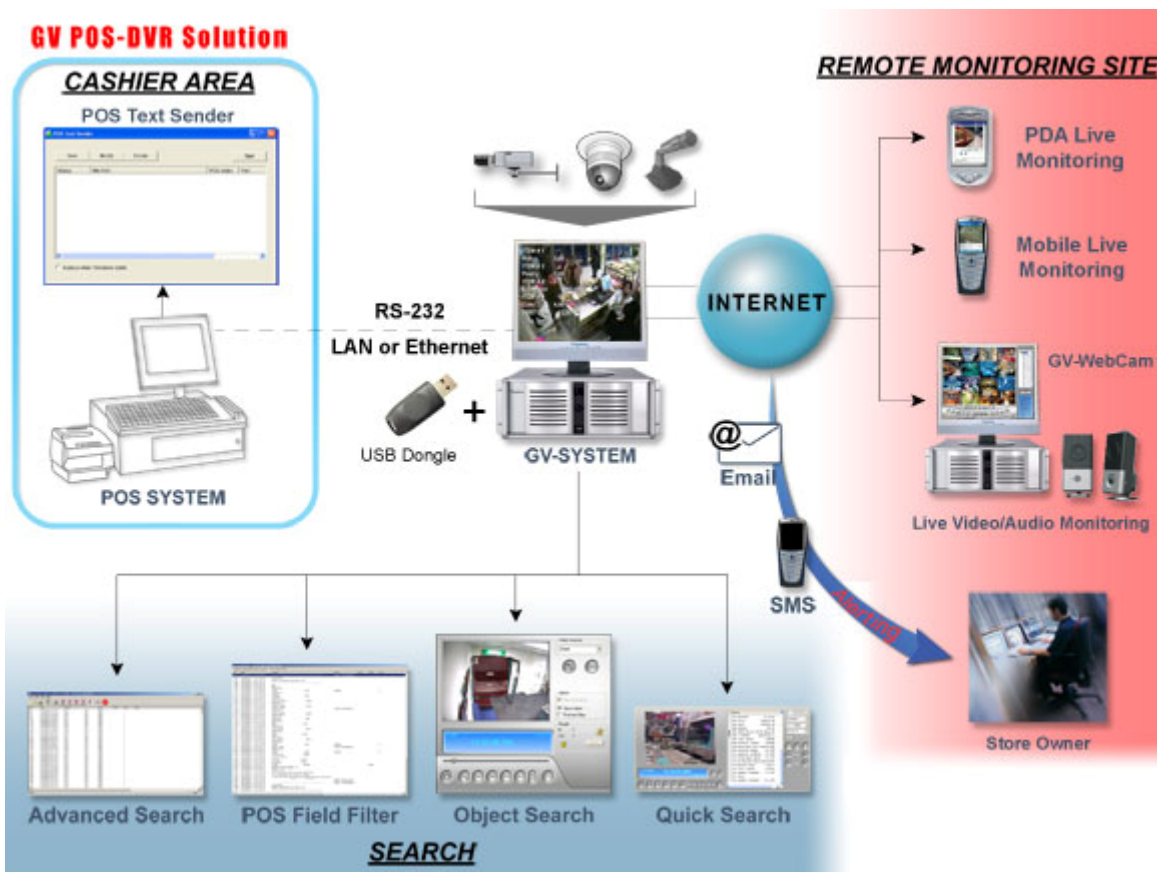

Specifications

Supported POS Device Type	Windows based (with TXT, INI, JNL file format), TCP/IP protocol, OPOS protocol	
Software	GV-POS Text Sender	
Hardware	Internal or external GV-USB Dongle	
Max. number of POS connected to GV-System	Serial Port Connection	4
	Network connection	16

Note:

1. It is required to install the program GV-POS Text Sender on the POS device. The program can be found in the GV-DVR System software DVD.
2. It is recommended to use the internal GV-USB Dongle to have the Hardware Watchdog function which restarts the PC when Windows crashes or freezes.
3. All specifications are subject to change without notice.

Software License		
Free License	N/A	
Maximum License	16 ports	
Increment for Each License	For GV-System before V8.4: 16 ports	
	For GV-System V8.4 or later: 1, 2, 4, 8, 12 or 16 ports	
Optional Combinations	N/A	
Dongle Type	Internal or external	